

Manual Motor Starters

Code	Current Range	Rating @415V	Auxiliary
NS2-25 0,16A	0,1 - 0,16A	0,08kW	Top and Side Mount
NS2-25 0,25A	0,16 - 0,25A	0,13kW	Top and Side Mount
NS2-25 0,4A	0,25 - 0,40A	0,18kW	Top and Side Mount
NS2-25 0,63A	0,40 - 0,63A	0,20kW	Top and Side Mount
NS2-25 1A	0,63 - 1,0A	0,30kW	Top and Side Mount
NS2-25 1,6A	1,0 - 1,6A	0,55kW	Top and Side Mount
NS2-25 2,5A	1,6 - 2,5A	0,75kW	Top and Side Mount
NS2-25 4A	2,5 - 4,0A	1,5kW	Top and Side Mount
NS2-25 6,3A	4 - 6,3A	2,2kW	Top and Side Mount
NS2-25 10A	6 - 10A	4,0kW	Top and Side Mount
NS2-25 14A	9 - 14A	5,5kW	Top and Side Mount
NS2-25 18A	13 - 18A	7,5kW	Top and Side Mount
NS2-25 23A	17 - 23A	10kW	Top and Side Mount
NS2-25 25A	20 - 25A	11kW	Top and Side Mount
*NS2-80B 25A	20 - 25A	11kW	Side Mount
*NS2-80B 40A	25 - 40A	28kW	Side Mount
*NS2-80B 63A	40 - 63A	30kW	Side Mount

***NS2-80B AUXILIARY SOLD SEPARATELY**



NS2-25



NS2-80B

Manual Motor Starter Accessories

Code	Description	Aux Contacts
NS2-AE11	Top Mount Auxiliary	1NO + 1NC
NS2-AU11	Side Mount Auxiliary	1NO + 1NC
NS2-AU11/80	Side Mount Auxiliary (For NS2-80B)	1NO + 1NC
NS2-MC	IP65 Empty Enclosure (MMS)	N/A
NS2-UV220	Undervoltage Trip 220V	N/A
NS2-SH220	Shunt Trip release 220V	N/A



NS2-AE11 (four of)



NS2-UV220 (two of)



NS2-AU11 (four of)



NS2-MC

